



NEMTEK
Electric Fencing Products

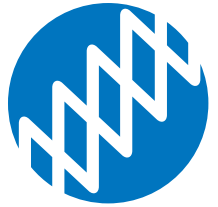


Omega Brackets

Instruction Manual

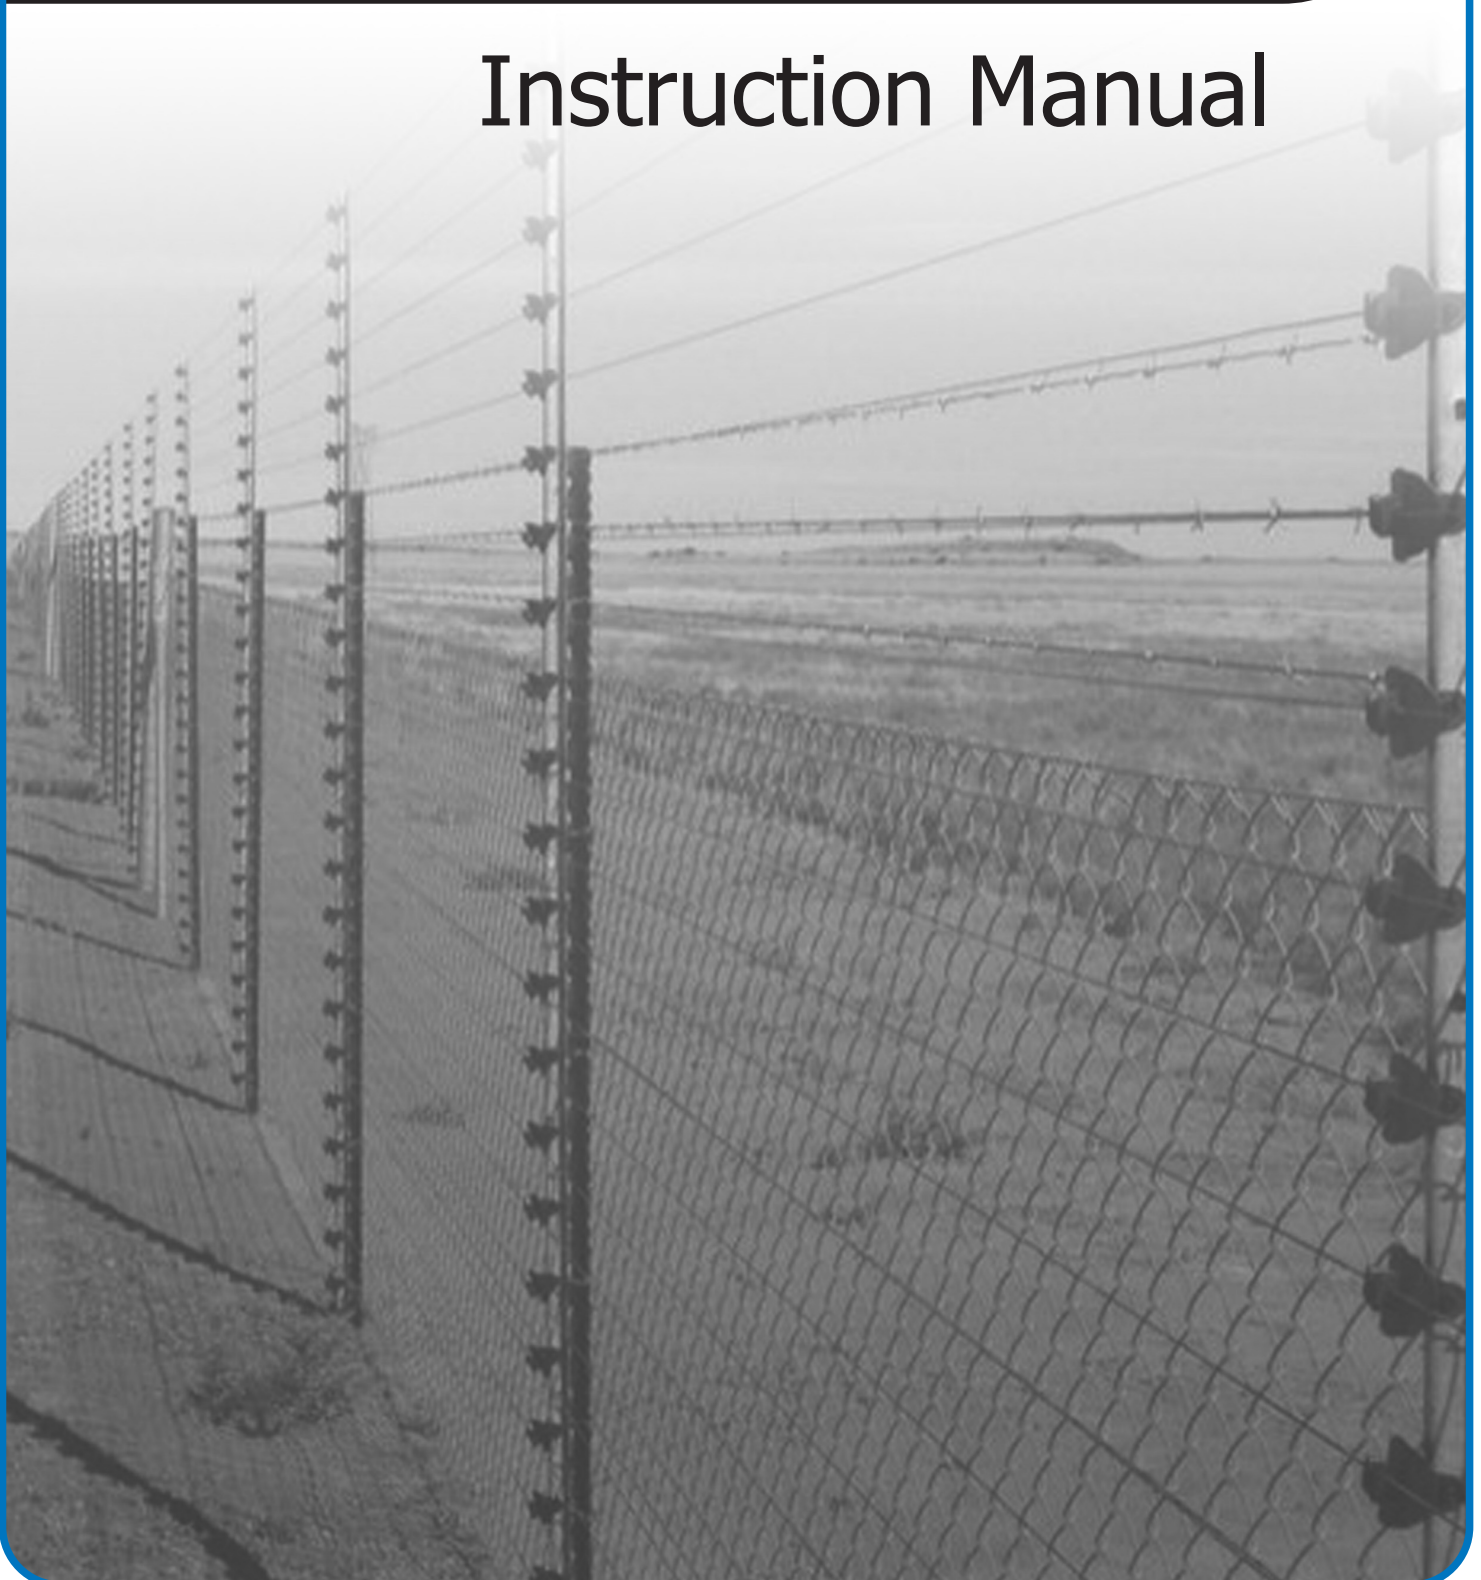

Omega end and corner Strain Bracket on round post

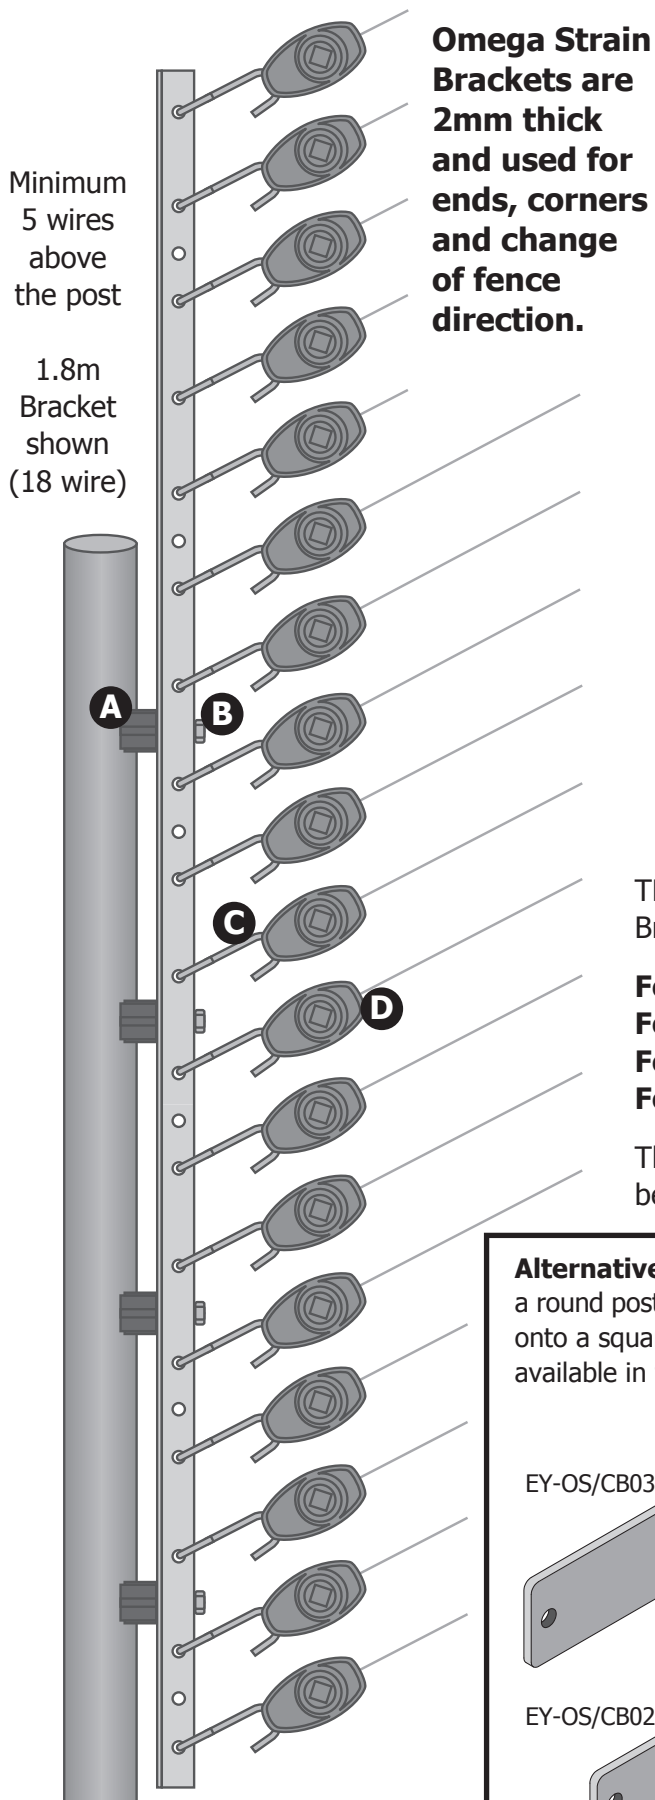


Key Elements


Omega Spacer
EY-O/SWT




TEK Screws 14 x 102mm
EA-TEK14x102/DM

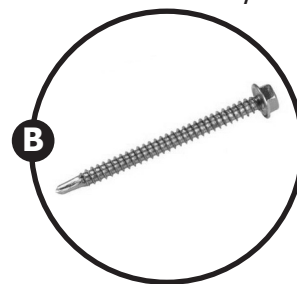

S-Hook
ES-HK/EP

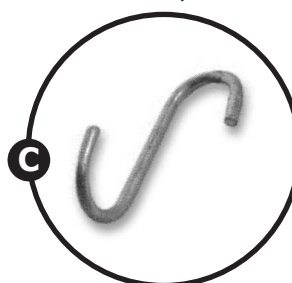

Hybrid Combo Tensioner BB
ES-CTNTBB

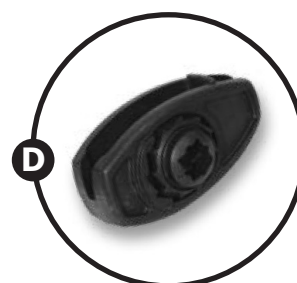


TEK Screws are placed through the middle of the Omega Bracket and Spacers when mounting to round tube posts.


For 1.8m Bracket use 4 Omega Spacers
For 2.1m Bracket use 4 Omega Spacers
For 2.4m Bracket use 5 Omega Spacers
For 3.0m Bracket use 6 Omega Spacers

The above also applies to fence corner posts which should be 2mm thick hot dip galvanised.

Alternative to A: These Omega Post Mount Brackets can be mounted onto a round post (both intermediate and corner posts). They can also be mounted onto a square post, but only at the beginning and end corners. They are available in two lengths: 107mm (EY-OS/CB03) and 62mm (EY-OS/CB02).

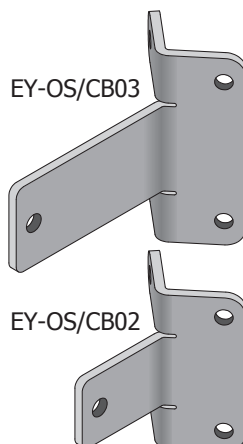

How to use the Omega Post Mount Brackets

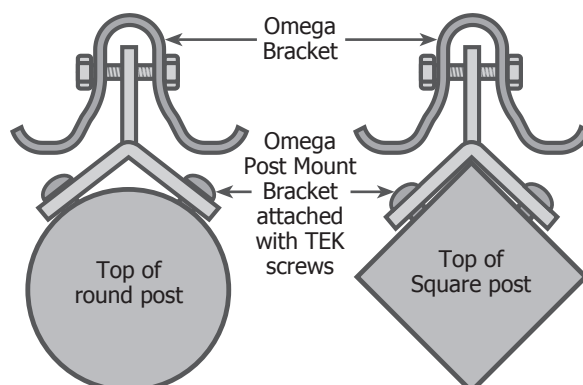

Omega Strainer Bracket on round end and corner post


Omega Strainer Brackets are 2mm thick and used for ends, corners and change of fence direction.

Minimum
5 wires above
the post


1.8m Bracket
shown
(18 wire)

Key Elements


Omega Spacer
EY-O/SWT

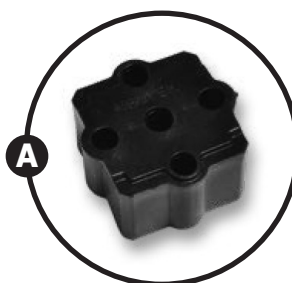

TEK Screws 14 x 102mm
EA-TEK14x102/DM

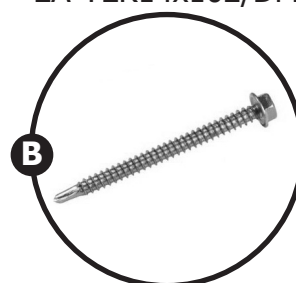

90 Degree S-Hook
ES-HK/EP/90DEG

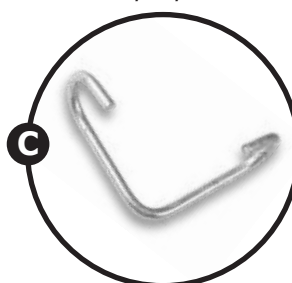

**Hybrid Combo
Tensioner BB**
ES-CTNTBB



**Heavy Duty
Compression Spring 3**
ES-CNT3



Alternative to **D** and **E** combination:

**Ultra Strain
Insulator**
EI-STB/R



**Heavy Duty
Compression Spring 4**
ES-CNT4HB





Omega Strainer Bracket on square tube post or flat surface

1.8m
Bracket
shown
(18 wire)

Omega Strainer Brackets are 2mm thick and used for ends, corners and change of fence direction.


TEK Screws or Nail-in Anchors are placed either side of the Omega Bracket and Spacers when attaching to square tube posts or a solid flat surface.

Top view of mounting

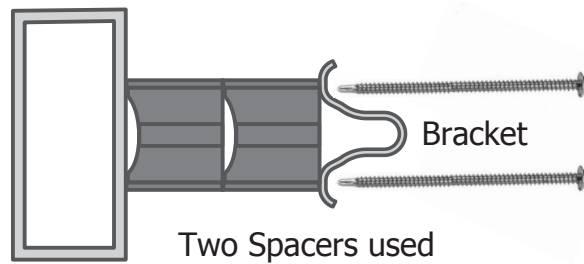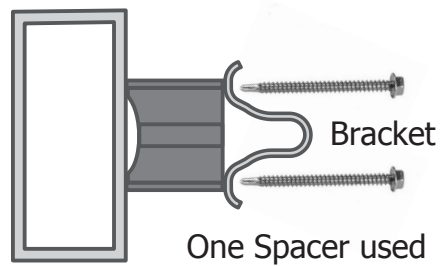


Key Elements


Omega Spacer
EY-O/SWT

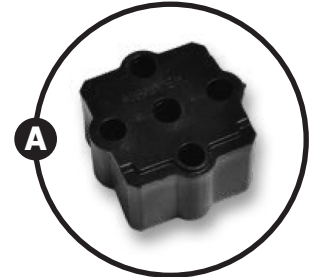


TEK Screws

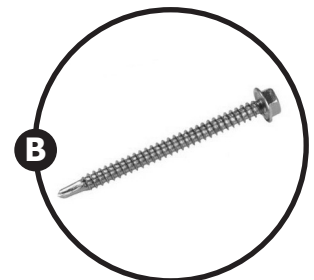

Nail-in Anchors

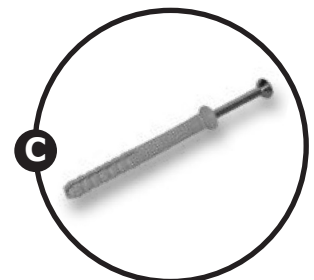


Steel tube mounting use TEK Screws

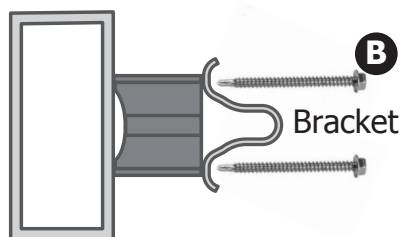


12 x 65mm TEK Screws
EA-TEK12x65/HDG

Solid wall mounting use Nail-in Anchors

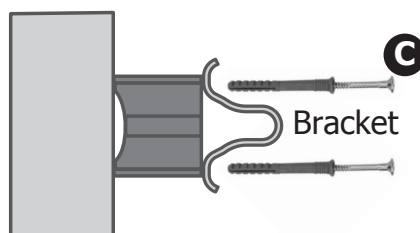


8 x 80mm Nail-in Anchors
EA-8800/XL

Intermediate Omega Bracket (1mm) mounted onto post

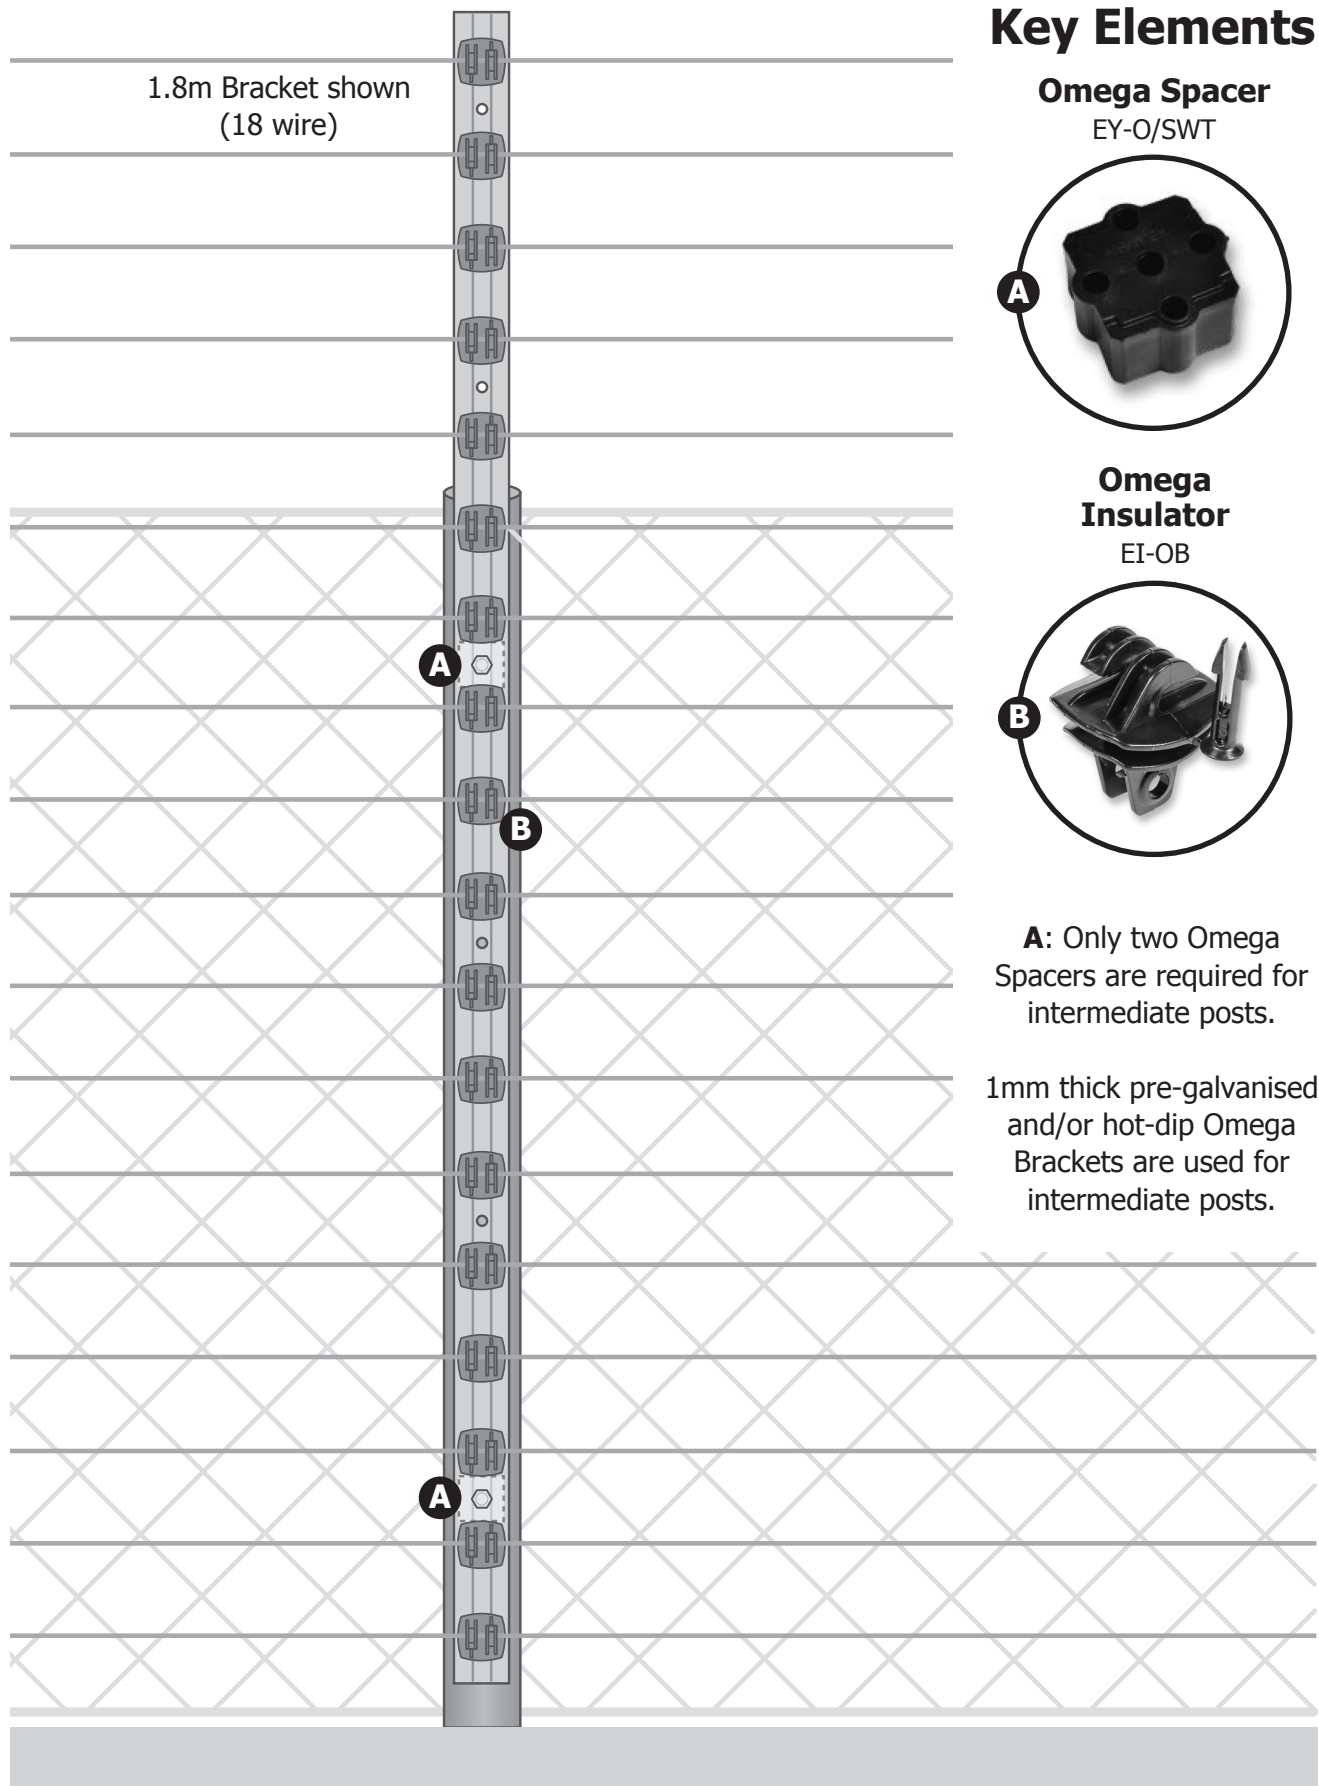

Application of 180 degree S-Hook for straight runs

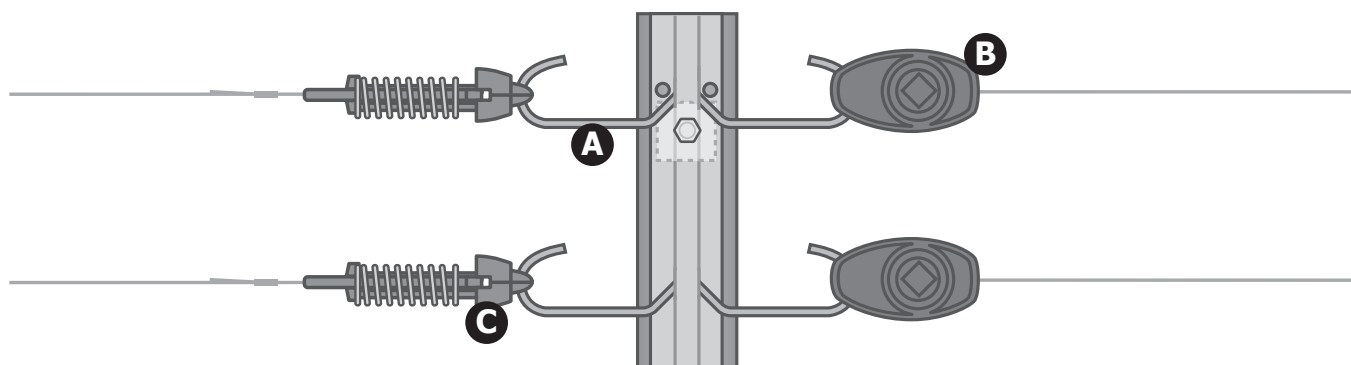



Primarily used as a zone splitter but also for mid-point fence tensioning in runs over 50 metres.

180 Degree S-Hook
ES-HK/EP/DS


Hybrid Combo TensionerBB
ES-CTNTBB

Heavy Duty Compression Spring 3
ES-CNT3

Key Elements

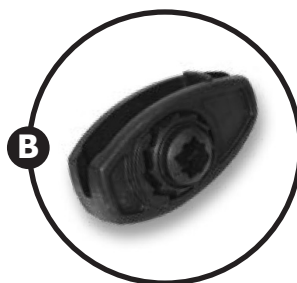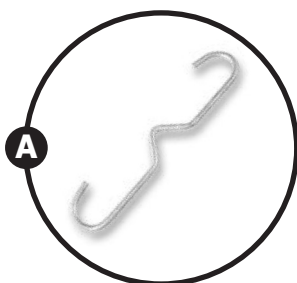



Anti-climb installation example

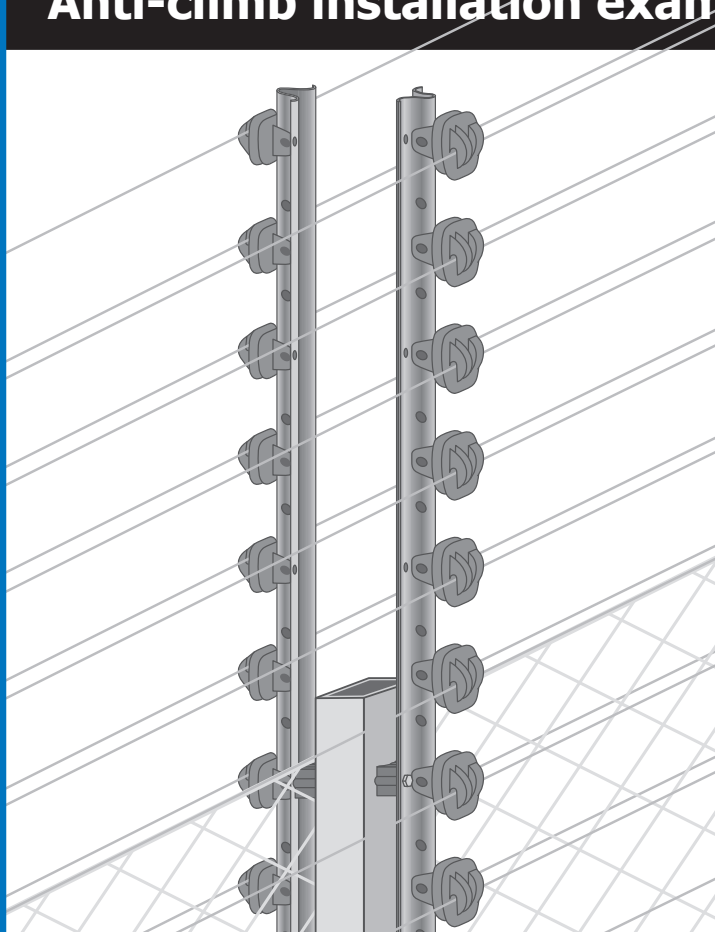

Key Elements

Omega Spacer
EY-O/SWT

Omega Insulator
EI-OB

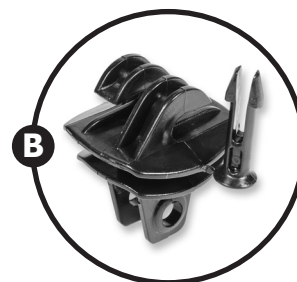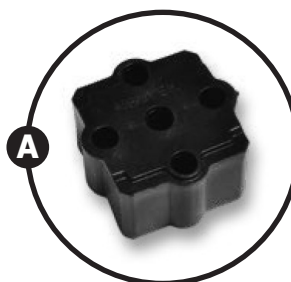


Brackets are installed on both sides of the fence as an effective anti-climb measure.

With mesh fences the distance between the live wires and the mesh must be between 100mm and 200mm, this means that two Omega Spacers or Omega Welded Brackets may be required on the mesh side of the post.


BTL3 Corner Insulator for change of fence direction

Use Omega Strainer Brackets (2mm thick).

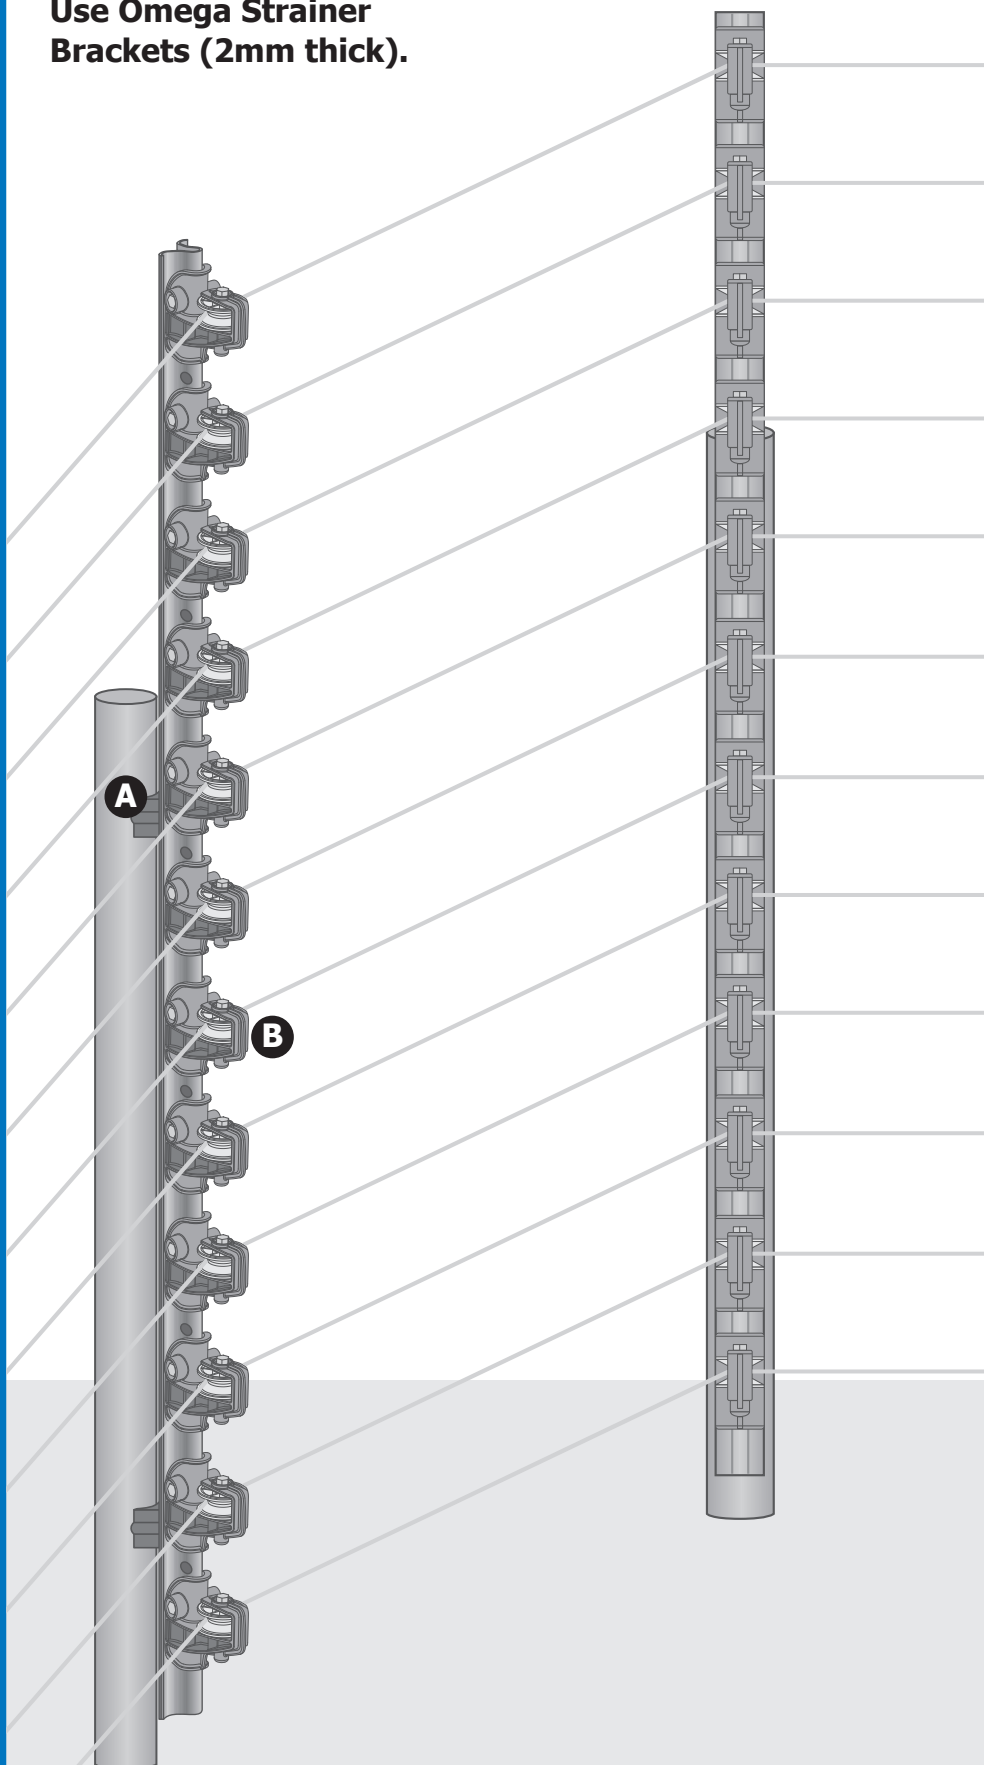


Key Elements

**Omega
Spacer**
EY-O/SWT

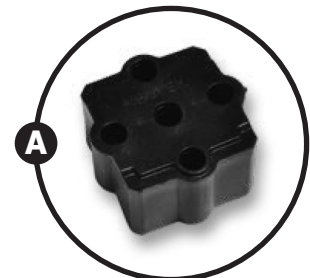


**BTL3 Corner
Insulator**
EI-BTL3

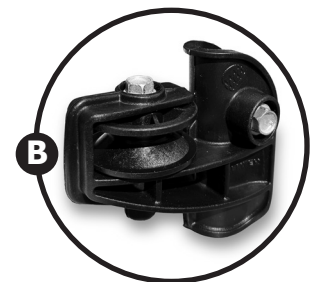

The BTL3 Corner insulator is used to guide the electric fence wires in corners and when changes of fence direction are required.


Omega Strain Brackets used as free standing posts

Use Omega Strain Brackets (2mm thick).

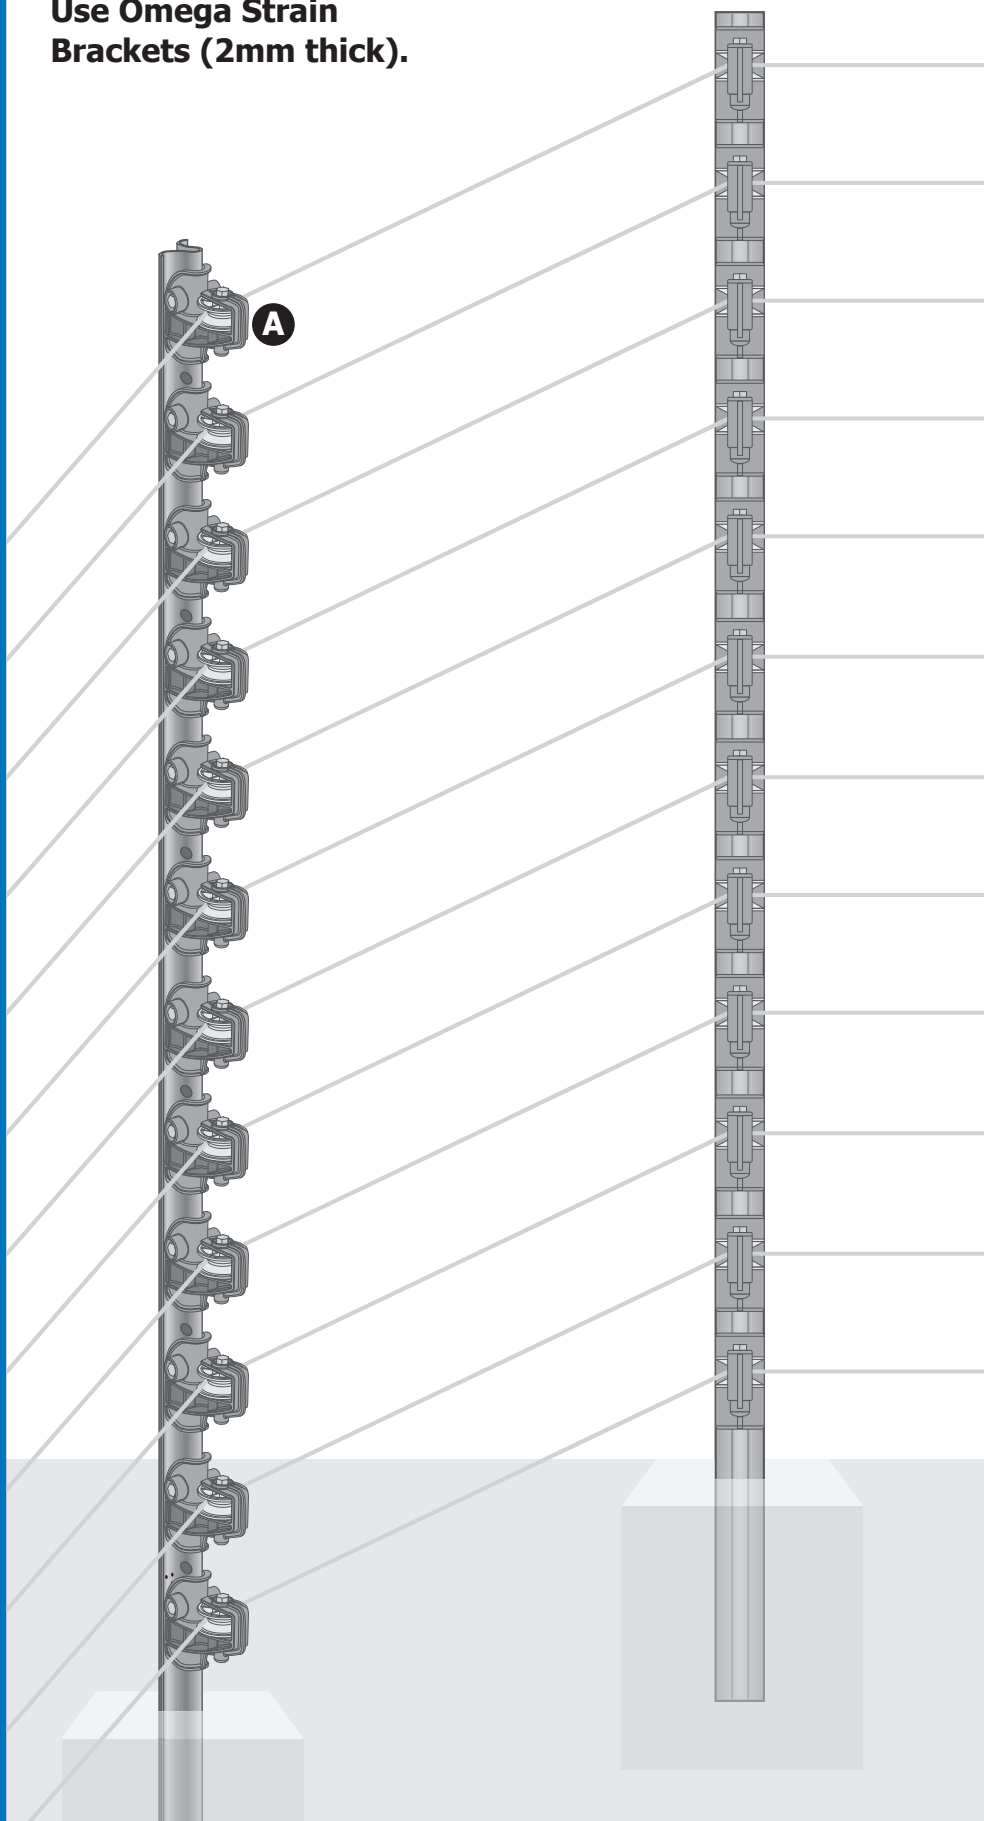

Key Elements

BTL3 Corner Insulator
EI-BTL3

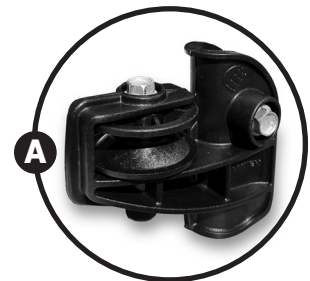

Alternative to **A**:
Omega Insulator
EI-OB



Omega Brackets can be used as free standing poles when set in 400mm concrete or soil crete.

Use the 2mm thick hot dip galvanised Omega Brackets for additional strength and stability.

Omega Brackets can be bolted or welded back-to-back for additional strength.

Please note:
This application may not be compliant in your location. Check local guidelines and requirements.

Omega Angled Anti-digging option

Use 2mm thick Omega Bracket for the upright.

Key Elements

**Omega
Insulator
EI-OB**




Angled Anti-digging brackets are available in different lengths as additional extras.

B: The angled 1mm Omega Intermediate Bracket (1200mm) can be TEK screwed onto the upright Omega Bracket.

C: Angled 1mm Omega Intermediate Brackets can be set in 250mm concrete or soil crete.

Please note:
This application may not be compliant in your location. Check local guidelines and requirements.

Omega 24 line system example schematic - option 1

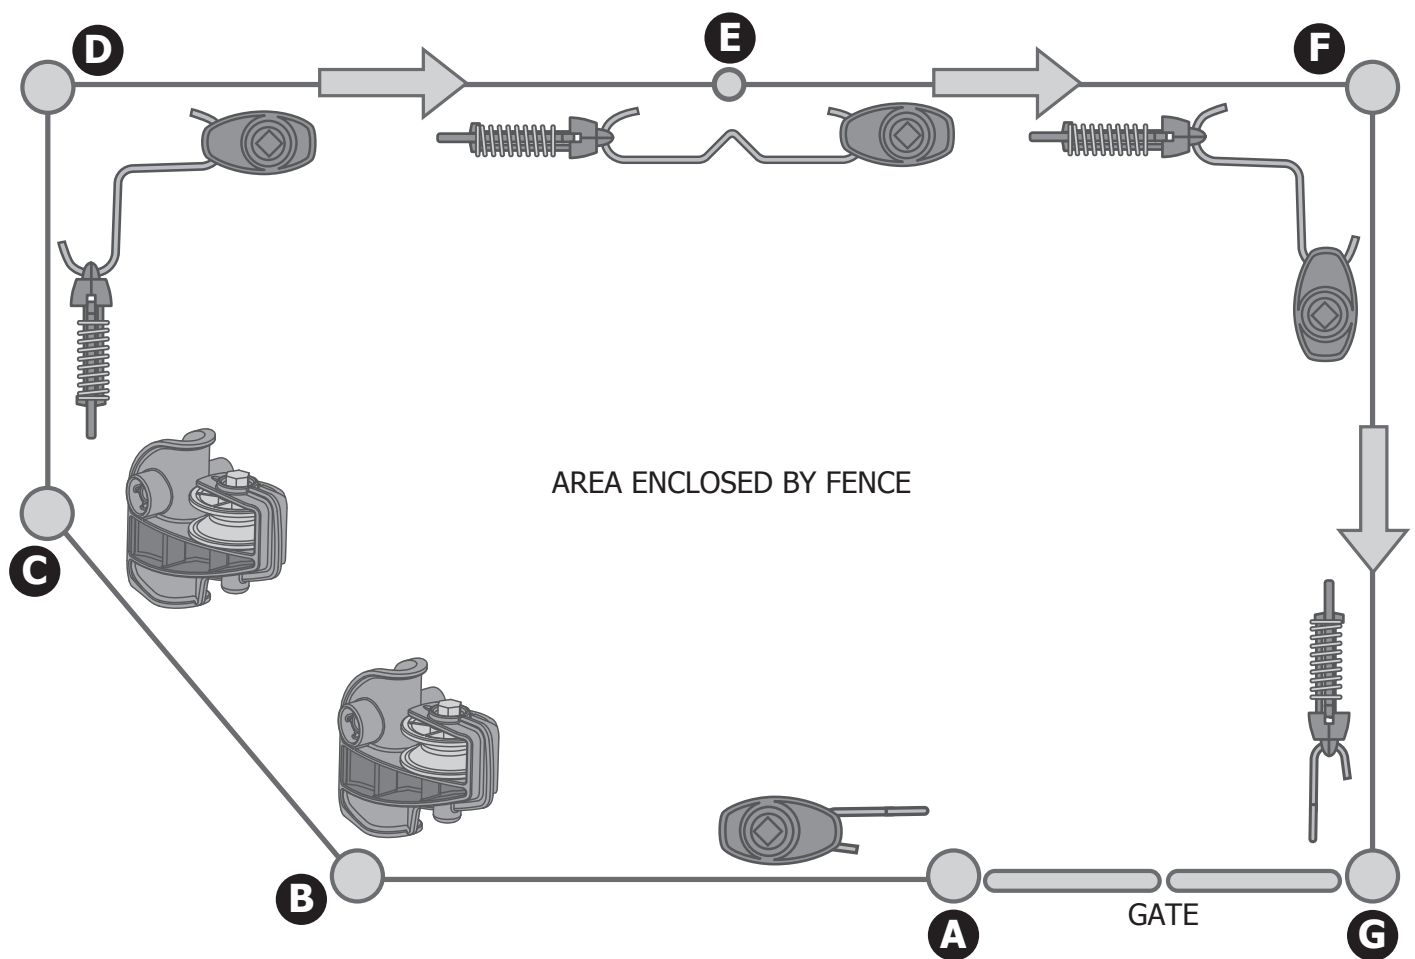

Fence Points

A: 24 x S-Hooks (ES-HK/EP); 24 x Combo Tensioners (ES-CTNTBB)

B: 24 x BTL3 Corner Insulators (EI-BTL3)

C: 24 x BTL3 Corner Insulators (EI-BTL3)

D: 24 x 90° S-Hooks (ES-HK/EP/90DEG); 24 x Combo Tensioners (ES-CTNTBB); 24 x Compression Springs (ES-CNT3)

E: 24 x 180° S-Hooks (ES-HK/EP/DS); 24 x Combo Tensioners (ES-CTNTBB); 24 x Compression Springs (ES-CNT3)


F: 24 x 90° S-Hooks (ES-HK/EP/90DEG); 24 x Combo Tensioners (ES-CTNTBB); 24 x Compression Springs (ES-CNT3)

G: 24 x S-Hooks (ES-HK/EP); 24 x Compression Springs (ES-CNT3)


Gate Detail

Gate 1: 48 x S-Hooks (ES-HK/EP); 24 x Combo Tensioners (ES-CTNTBB); 24 x Compression Springs (ES-CNT3)

Gate 2: 48 X S-Hooks (ES-HK/EP); 24 x Combo Tensioners (ES-CTNTBB); 24 x Compression Springs (ES-CNT3)

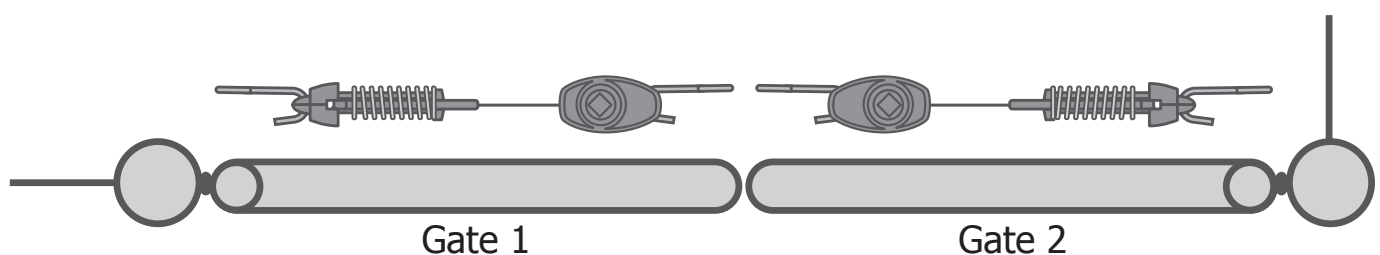

Omega 24 line system example schematic - option 2

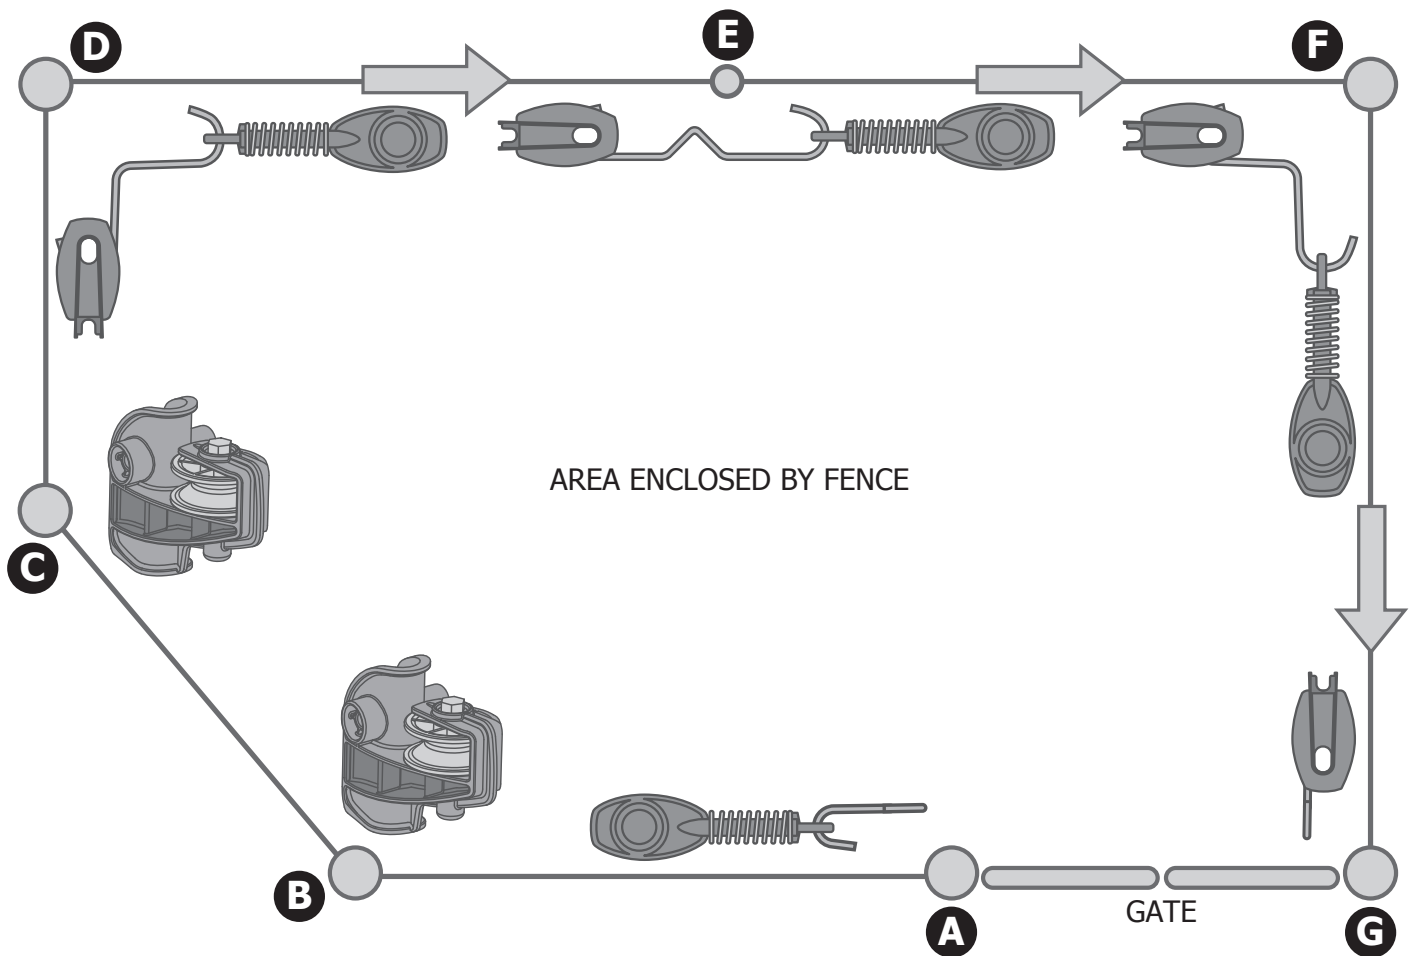

Fence Points

A: 24 x S-Hooks (ES-HK/EP); 24 x Hybrid Compression Spring 4 (ES-CNT4HB)

B: 24 x BTL3 Corner Insulators (EI-BTL3)

C: 24 x BTL3 Corner Insulators (EI-BTL3)

D: 24 x 90° S-Hooks (ES-HK/EP/90DEG); 24 x Hybrid Compression Spring 4 (ES-CNT4HB); 24 x Strain Insulator (EI-STB/J)

E: 24 x 180° S-Hooks (ES-HK/EP/DS); 24 x Hybrid Compression Spring 4 (ES-CNT4HB); 24 x Strain Insulator (EI-STB/J)


F: 24 x 90° S-Hooks (ES-HK/EP/90DEG); 24 x Hybrid Compression Spring 4 (ES-CNT4HB); 24 x Strain Insulator (EI-STB/J)

G: 24 x S-Hooks (ES-HK/EP); 24 x Strain Insulator (EI-STB/J)

Gate Detail

Gate 1: 48 x S-Hooks (ES-HK/EP); 24 x Hybrid Compression Spring 4 (ES-CNT4HB); 24 x Strain Insulator (EI-STB/J)

Gate 2: 48 X S-Hooks (ES-HK/EP); 24 x Hybrid Compression Spring 4 (ES-CNT4HB); 24 x Strain Insulator (EI-STB/J)

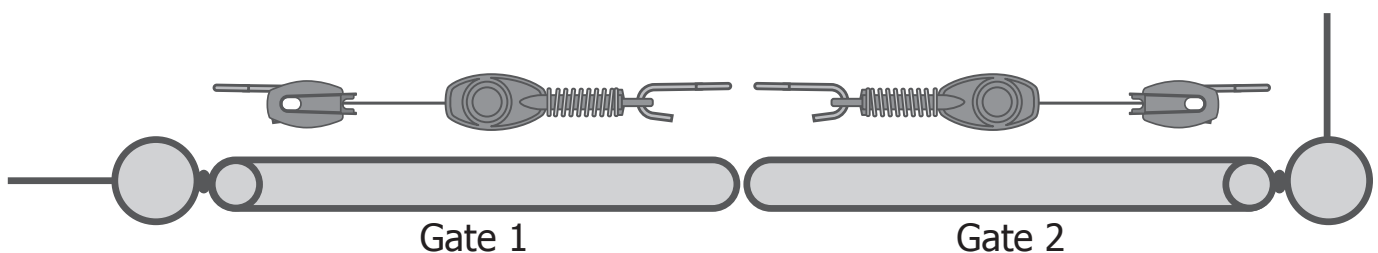

WARRANTY

Unless otherwise specified all Nemtek energizers have a 2 year warranty and all other fencing components have a 1 year warranty from date of sale against defects due to faulty workmanship or materials. Nemtek (Pty) Ltd will, at its discretion, either repair or replace a product that proves to be defective.

Nemtek (Pty) Ltd does not guarantee that the operation of the product will be uninterrupted and totally error free. Faulty products must be returned to one of the Nemtek Group outlets. The buyer shall pay all shipping and other charges for the return of the product to Nemtek (Pty) Ltd.

LIMITATION OF WARRANTY

The warranty does not apply to defects resulting from acts of God, modifications made by the buyer or any third party, misuse, neglect, abuse, accident or mishandling.

EXCLUSIVE REMEDIES

The remedies provided herein are Nemtek (Pty) Ltd's sole liability and the buyers sole and exclusive remedies for breach of warranty. Nemtek (Pty) Ltd shall not be liable for any special, incidental, consequential, direct or indirect damages, whether based on contract, tort, or any other legal theory. The foregoing warranty is in lieu of any and all other warranties, whether expressed, implied, or statutory, including but not limited to warranties of merchantability and suitability for a particular purpose.



OB 08/25 Rev.1.2
OB 08/26 Rev.1.3
EI-BTL3 replaces EI-BTL2 & ES-HK/EP/PTH
Updated to colour